

L-014-R-Series-120V

Includes R3, R3A, R5, R5A, R7, R8, and R19 shades

LAMP TYPE: G9 – Maximum 4W LED

SUITABLE FOR WET LOCATIONS





WARNING — Risk of Electric Shock. Verify that power is OFF before installing this fixture. This fixture must be installed in accordance with the National Electric Code and local codes. Failure to do so may result in serious personal injury or death. Wiring must be done by a licensed electrician.

INSTALLATION

1. Verify that the power is off.
2. Hold the Canopy against the junction box to check the orientation of the holes. It may be necessary to use the included universal crossbar to achieve proper orientation. If the junction box's screw holes are spaced at 2-3/4" instead of 3-1/2", use of the crossbar is required.
3. Pass the wire leads from the fixture through the center hole of the Canopy gasket (supplied) and the crossbar (if used).
4. Use silicone-filled wire nuts to join fixture leads to power supply wires as shown in the diagram: black lead to hot, white lead to neutral, and green to ground. Use silicone or electrical tape around wire nuts to ensure proper connection. If using the crossbar, attach it to the junction box now.
5. Attach Canopy to junction box (or crossbar) with the supplied screws, making sure that the gasket is consistently between junction box and Canopy.

RELAMPING

1. DO NOT UNSCREW FINIAL on top of Shade to relamp. Unscrew the Shade Assembly by grasping the Brass Collar under the glass and turning it counterclockwise. The assembly is removed as a unit.
2. Pull straight up to remove the Lamp.
3. Insert the new Lamp into the Socket and screw the Shade Assembly back onto the center section of the fixture. Do not overtighten.

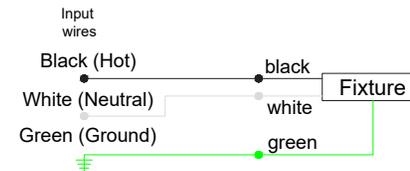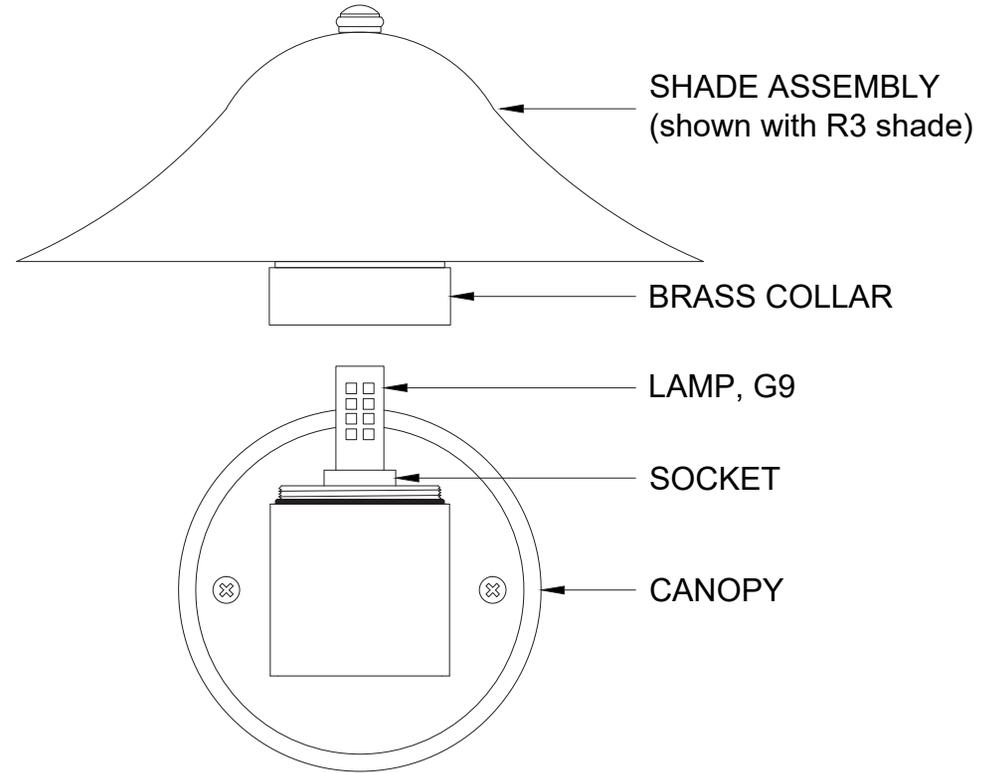

CSA Listed
File # 190030
www.BeachsideLighting.com
808-405-6732

