

MB4 120V

LAMP TYPES:

- 120V MR16 GU10 bi-pin base; Max 50W halogen (outdoor use) / 10W halogen (indoor use), 15W LED (indoor or outdoor use)
- LED Module; Max 12W

SUITABLE FOR WET LOCATIONS

WARNING — Risk of Electric Shock. Verify that power is OFF before installing this fixture. This fixture must be installed in accordance with the National Electric Code and/or local codes. Failure to do so may result in serious personal injury or death. Wiring must be done by a licensed electrician.

INSTALLATION on BRASS SURFACE BOX (BSB)

1. For mounting to concrete, skip to Step 5.
2. When mounting to a wooden surface, use the Mounting Collar to mark locations of the three mounting screws and hole(s) for the supply wiring.
3. Drill holes for wires as needed and drill pilot holes at the marked screw locations using a 15/64" drill bit.
4. Secure the Mounting Collar with supplied 3/8" lag screws using a 9/16" socket/wrench. Proceed to Step 10.
5. Dig a hole at desired location at least 12" diameter x 12" deep and run conduit as necessary for power supply wires, using the Mounting Collar for positioning. Conduit should stick up above top of concrete 1/4". (Figure 1)
6. Fill hole with concrete. Double-check conduit location with Mounting Collar.
7. Once concrete is set, place Mounting Collar over conduit and mark locations for the three mounting holes.
8. Use a 5/8" masonry bit to drill a minimum 2-1/2" deep hole at each marked location and tap in the supplied lag shields.
9. Secure the Mounting Collar with supplied 3/8" lag screws using a 9/16" socket wrench.
10. Pull supply wires and verify they are not energized.
11. Feed the wire leads from the fixture through the top of the BSB Cover, apply threadlock to the Base threads, and screw the Cover tightly onto the 1/2" threads in the bottom of the fixture.
12. Use included silicone-filled wire nuts to join fixture leads to supply wires as shown in Figure 1: the black lead connects to hot, the white to neutral, and the green to ground. Use silicone or electrical tape around wire nuts to ensure proper connection.
13. Slide the fixture with the Cover attached straight down over the Mounting Collar.
14. If the fixture is equipped with the Half Shield, orient the fixture so the light shines in the desired direction. Alternately tighten the three set screws in the Cover with a 1/8" hex wrench.



CSA Listing pending
800-405-6732
www.BeachsideLighting.com

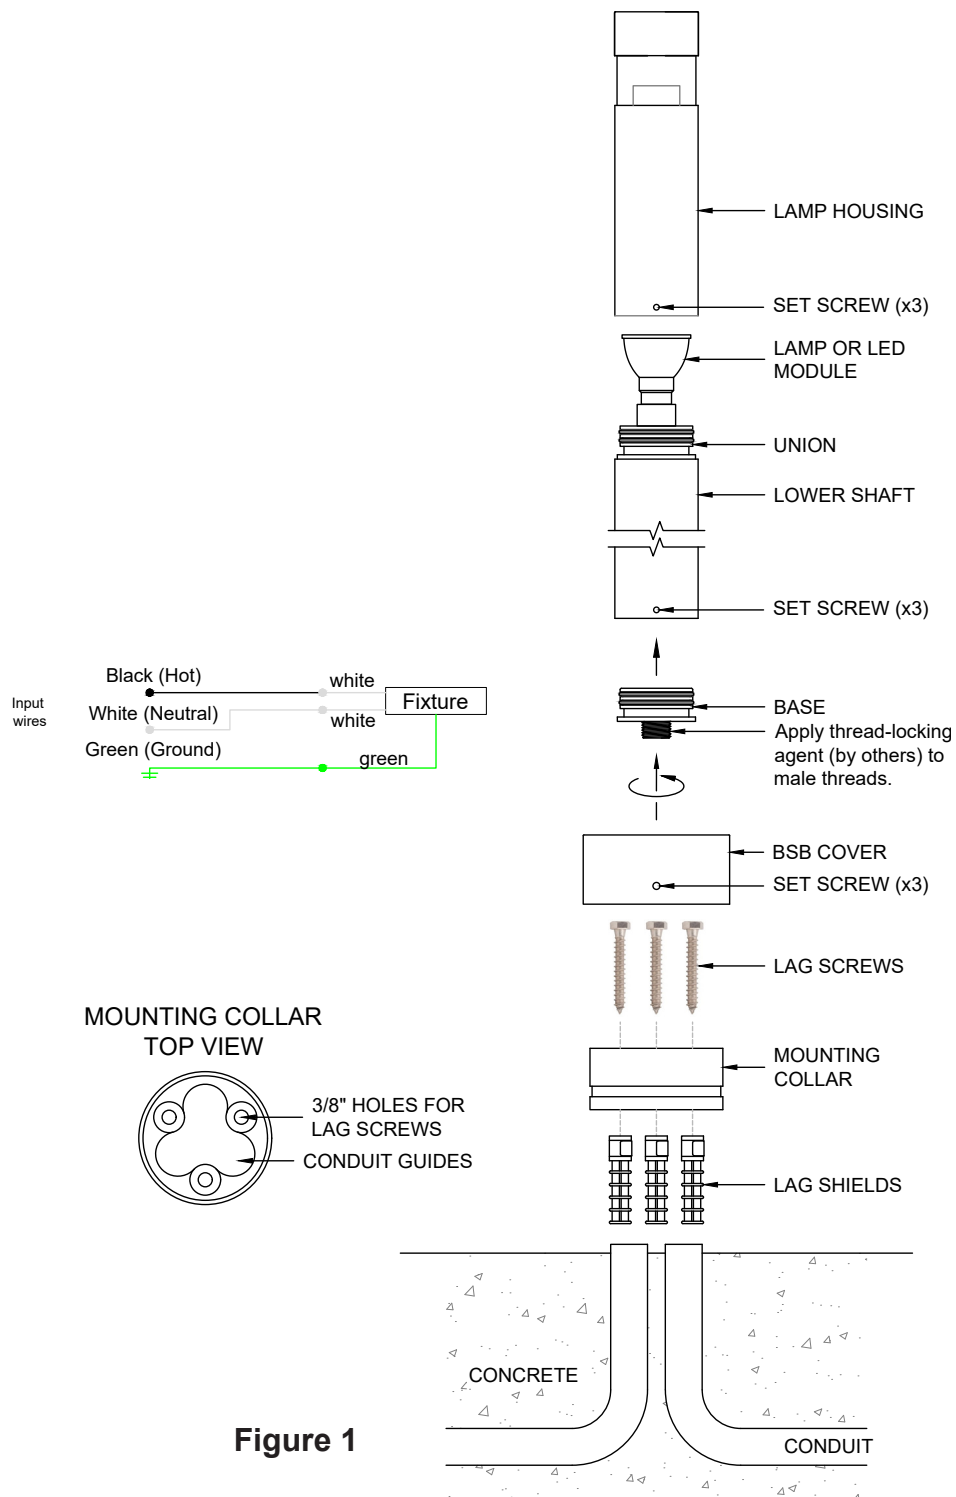


Figure 1

INSTALLATION on JUNCTION BOX (JB)

1. Dig a hole at desired location at least 12" diameter x 12" deep and run conduit as necessary for power supply wires. Position the Junction Box (JB) so that the bottom of its Cover will be above grade after the concrete is poured. (Figure 2)
2. Plug unused holes and ensure all fittings are watertight.
3. Fill hole with concrete, making sure JB is level and that its Cover will be above grade.
4. Once concrete is set, remove Cover using a 5/32" hex wrench and pull the supply wires. Verify they are not energized.
5. Feed the wire leads from the fixture through the top of the JB Cover and gasket, apply threadlock to the Base threads, and screw the Cover tightly onto the 1/2" threads in the bottom of the fixture.
6. Use included silicone-filled wire nuts to join fixture leads to supply wires as shown in Figure 1: the black lead connects to hot, the white to neutral, and the green to ground. Use silicone or electrical tape around wire nuts to ensure proper connection.
7. Push the connections into the JB and reattach the Cover/fixture assembly.
8. If the fixture is equipped with the Half Shield, it can be aimed by loosening the three set screws at the base of the Shaft (or Lamp Housing if not equipped with a lower Shaft) with a 3/32" hex wrench. Aim the fixture as desired and alternately retighten the set screws.

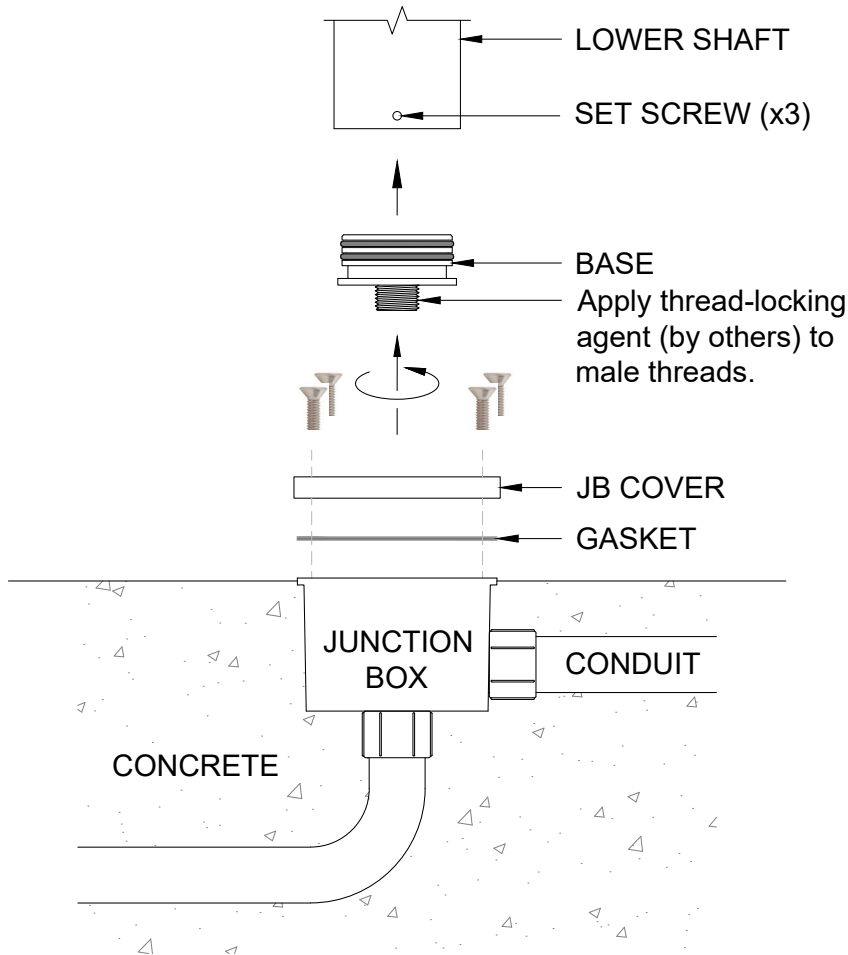


Figure 2

INSTALLATION on GROUND SPIKE (GS2BC)

Mounting on ground spike is only recommended for the 9" version of the MB4. Taller versions require use of the BSB or JB mounting accessories.

1. Dig a hole at desired location roughly 10" diameter x 18" deep and route the supply wires coming from the power source to the hole, entering it near the bottom. (Figure 3)
2. Remove the Brass Cap from the Ground Spike by removing the screw from the side of the Cap.
3. Feed the supply wire into the bottom of the Spike and out through the top while placing the Spike into the hole.
4. Refill the hole while keeping the Spike vertical. Position the Spike so that the bottom of its Cap will be at grade when the hole is completely filled.
5. Feed the wire leads from the fixture through the top of the Cap, apply threadlock to the Base threads, and screw the Cap tightly onto the 1/2" threads in the bottom of the fixture.
6. Use included silicone-filled wire nuts to join fixture leads to supply wires as shown in Figure 1: the black lead connects to hot, the white to neutral, and the green to ground. Use silicone or electrical tape around wire nuts to ensure proper connection.
7. Feed the wires and connectors into the top of the Spike while replacing the Cap/fixture assembly onto the Spike. Align the hole and fasten the Cap to the Spike with the screw removed in Step 2.
8. If the fixture is equipped with the Half Shield, it can be aimed by loosening the three set screws at the base of the Lamp Housing with a 3/32" hex wrench. Aim the fixture as desired and alternately retighten the set screws.

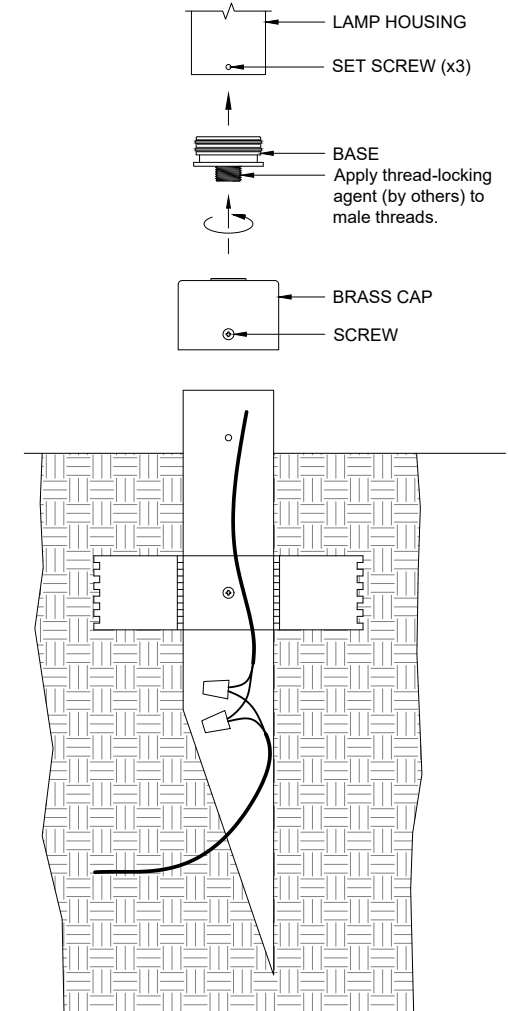


Figure 3

LAMPING – MR16

1. Make sure the power to the fixture is off.
2. To access the lamp compartment, loosen the three set screws at the bottom of the Lamp Housing with a 3/32" hex wrench and slide it straight up to remove, exposing the Lamp. (Figure 1)
3. Using a soft cloth, grasp the lamp and twist it about 1/4 turn counterclockwise. Pull straight up to remove from socket.
4. Align the pins of the new lamp with the holes in the socket, push the lamp pins straight down into the socket, and turn clockwise until it stops--about 1/4 turn.
5. Reinstall the Lamp Housing. Apply a grease appropriate for use on silicone o-rings to the o-rings if necessary.
6. Alternately tighten all three set screws.

LAMPING – Integrated LED Module

This fixture has a long-life LED Module that should not need replacement for years. However, if a Module fails or technology improves and a new one is desired, replacements are available from Beachside Lighting (808-263-5717). Once received:

1. Make sure the power to the fixture is off.
2. With the fixture still attached, remove the Cap or Cover from the Ground Spike, Junction Box, or BSB.
3. Disconnect the fixture leads from the supply wires.
4. Loosen the three set screws at the bottom of the Lamp Housing with a 3/32" hex wrench and slide it straight up to remove, exposing the LED Module.
5. If the fixture is equipped with a Lower Shaft, loosen the three set screws at its bottom with a 3/32" hex wrench and slide it up off the Base, pulling the wires up through the red silicone plug inside the Base. (Figure 1)
6. Unscrew the LED Module 4-5 revolutions to remove it.
7. Carefully press the red silicone plug out the bottom of the Base from the top with a narrow, blunt object and save to be reinserted later.
8. Feed the lead wires from the new LED Module through the Base (or Union and Lower Shaft, if equipped, then the Base) and screw the Module down until it bottoms out.
9. Replace the Lamp Housing (and Lower Shaft, if equipped) and alternately tighten the set screws.
10. Feed the leads through the silicone plug. Carefully slide the plug up the wires and reinsert the plug back into the Base.
11. Follow the final three Steps in the appropriate "Installation" section of these instructions to complete the operation.