

OHE-12V

LAMP TYPE: GU5.3 MR11 self-ballasted LED, Maximum 2 Watts

Fixture may be installed less than 5 ft (1.5 m) from the inside walls of a pool, spa, or fountain when supplied by listed transformers or power supplies that comply with NEC 680.23(A)(2).



WARNING — RISK OF ELECTRIC SHOCK. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved. Failure to do so may result in serious personal injury or death.

This is a low-voltage fixture for use with maximum 25A, 15V power units only. A remote transformer is required. Do not overload the transformer by installing or relamping with higher wattage lamps that together exceed the capacity of the transformer. Protect the fixture wiring by routing in close proximity to the luminaire or fitting, or next to a structure like a house or deck. Do not bury except for a maximum 6 inches (15.2 cm) to connect to the main low-voltage cable. Trim fixture wires so connection is made within 6 inches (15.2 cm) from a building structure, luminaire, or fitting. Contact Beachside Lighting below to order main low voltage cable and accessories.

- FOR USE WITH LANDSCAPE LIGHTING POWER SUPPLY ONLY
- THIS DEVICE IS ACCEPTED AS A COMPONENT OF A LANDSCAPE LIGHTING SYSTEM WHERE THE SUITABILITY OF THE COMBINATION SHALL BE DETERMINED BY THE LOCAL INSPECTION AUTHORITIES HAVING JURISDICTION
- DO NOT CONNECT TWO OR MORE POWER SUPPLIES IN PARALLEL
- LANDSCAPE LIGHTING SYSTEMS ARE FOR OUTDOOR USE ONLY
- NOT FOR USE IN DWELLING UNITS
- A LUMINAIRE SHALL NOT USE TUNGSTEN HALOGEN LAMPS UNLESS THE LUMINAIRE IS MARKED FOR SUCH LAMPS


INSTALLATION

For "SM" version, feed wire through 1/2"-threaded hole in mounting accessory, hold fixture by the Base, and screw into mount. For standard version:

1. Solder included copper adapter onto 1" / 28mm copper tubing.
2. Feed fixture wire through thread fixture onto copper adapter / tubing.
3. Install tubing into softscape to a minimum depth of 15" / 38 cm below grade.
4. After verifying power is off, join fixture leads to supply wires using silicone-filled wire nuts.

LAMPING

1. Remove the three button-head screws holding the Decorative Copper Shield onto the Base and slide Shield straight up to remove.
2. Remove the lens assembly by unscrewing the Lamp Housing Bottom from the Base. Do not hold by the glass lens to unscrew.
3. Align pins of lamp with holes in socket and push down until base of lamp contacts socket.
4. Replace lens assembly and Decorative Shield removed in steps 1 and 2.

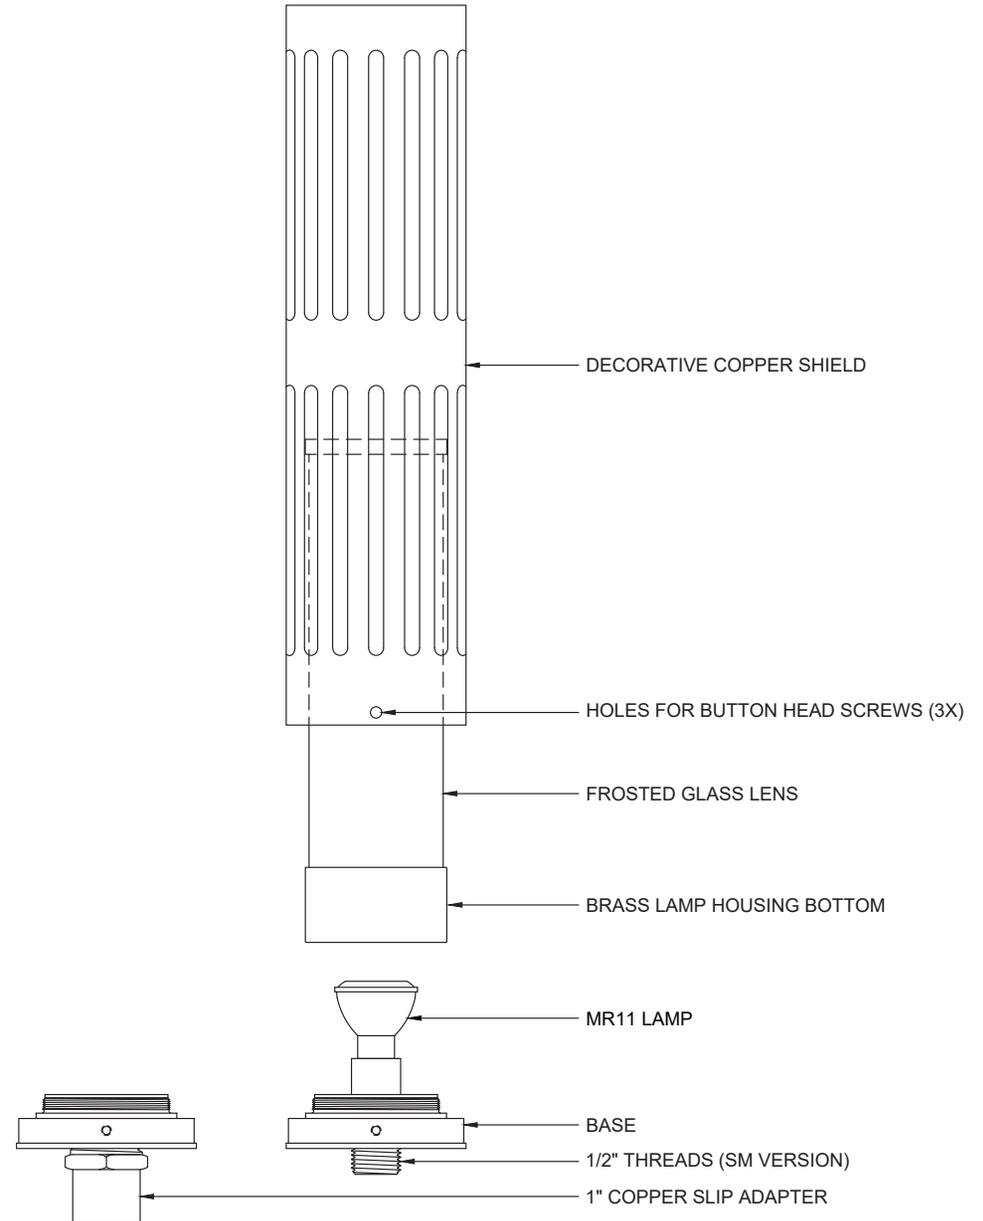

www.BeachsideLighting.com
808-405-6732