

# L-011-P-CM1-120V

# L-011-P-CM2-120V

**LAMP TYPE: MR16, GU10 bi-pin base**  
**Maximum 20 Watts LED, 50 Watts halogen (35 Watts max. halogen for CM2)**  
**SUITABLE FOR WET LOCATIONS**

**WARNING** — Risk of Electric Shock. Verify that power is OFF before installing this fixture. This fixture must be installed in accordance with the National Electric Code and/or local codes. Failure to do so may result in serious personal injury or death. Wiring must be done by a licensed electrician.

## INSTALLATION


1. Verify that the power is off.
2. Hold the Canopy against the junction box to check the orientation of the holes. It may be necessary to use the included universal crossbar to achieve proper orientation. If the junction box's screw holes are spaced at 2-3/4" instead of 3-1/2", use of the crossbar is required.
3. Feed the wire leads from the fixture through the gasket (supplied) and the crossbar (if used).
4. Use the included wire nuts to join the fixture leads to the power supply wires as shown in the diagram: black lead connects to hot, white to neutral, and green to ground. Use silicone or electrical tape around the wire nuts to ensure proper connection.
5. Push the connections into the junction box.
6. If using the crossbar, attach it to the junction box now.
7. Attach Canopy to junction box or crossbar with the supplied screws, ensuring the gasket is consistently between junction box and canopy.
8. Rotate the fixture(s) to the desired orientation and tighten the Locknut(s) against the Canopy.
9. Adjust the angle of the fixture head(s) to the desired position and tighten the Swivel(s) with a 5/32" hex wrench.

## LAMPING


1. Unscrew Housing from Base by turning Housing counterclockwise.
2. Holding the lamp at its base, rotate it almost 1/4 turn counter-clockwise and pull up to remove.
3. Holding the new lamp at its base, insert the pins into the socket and turn clockwise until it stops.
4. Screw the Housing back onto the fixture Base. Do not overtighten.

## SECURING GOBO

1. Turn off the power to the fixture.
2. Unscrew End Cap from Housing. This will take several revolutions.
3. Remove stainless steel Snap Ring from inside the Housing. This is the ring with a round cross section and closest to the front of the fixture. This fixture accepts Gobos that are 50 - 51.5 mm in diameter.
4. Place Gobo up against the non-removable Retention Ring. Be sure to consider the orientation of the Gobo pattern and its alignment with the vertical axis of the Swivel.
5. Secure the Gobo by reinserting the Snap Ring.
6. Reattach the End Cap by slowly sliding it over the O-ring on the Housing. Allow threads to catch and tighten one or two revolutions.
7. Turn the power on and continue threading the End Cap onto Housing to adjust focus of the projected image.

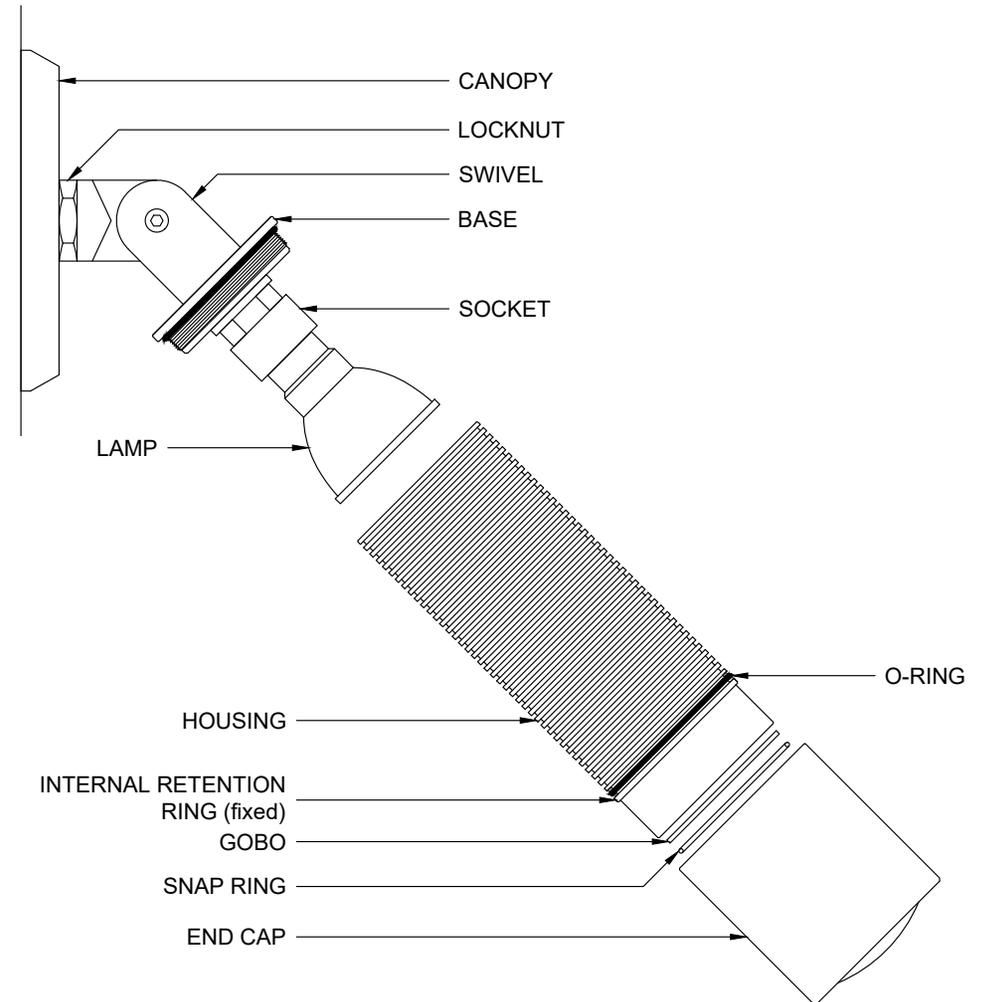

808-405-6732  
[www.BeachsideLighting.com](http://www.BeachsideLighting.com)

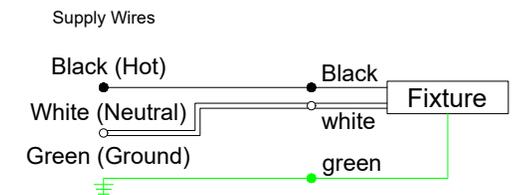

CSA Listed, file # 190030